





Welcome to your new Unicorn® Smartboard®. Over the next few pages you will find detailed instructions on how to set up and hang your Unicorn® Smartboard®.

Quick set up Guide



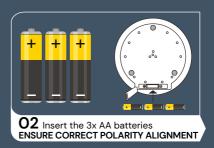

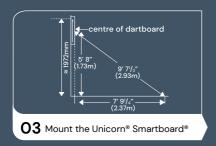







Smartb@ard®


WHAT'S INCLUDED







3x blue darts

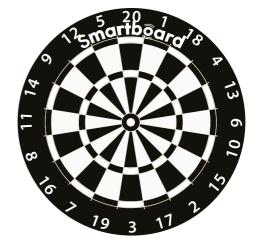

1x Unicorn® Smartboard®



1x Oche mate



3x AA batteries



HANGING KIT

- 2 x bracket screws
- 1 x Unicorn® Smartboard® screw
- 2 x wall plugs
- 1 x wall bracket

TOOLS REQUIRED



1x Pencil



1x Phillips screwdriver



1x Spirit level



1x Drill (5.5mm drill bit)















Assembly instructions for your new Unicorn® Smartboard®


Smartb@ard®

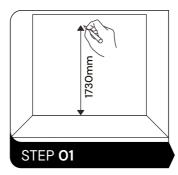


Find a point on the wall where you would like your Unicorn® Smartboard® to hang. Measure 1730mm from the floor to where the centre of your Unicorn® Smartboard® will hang. Make a small mark with a pencil.

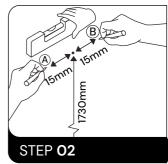


From your pencil mark, measure left and right 15mm. Ensure your measurements are straight, use a spirit level if you have one. Then make one mark 15mm(A) to the left of your first mark, and another 15mm (B) to the right of your first mark.

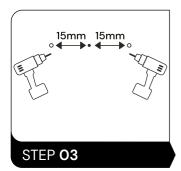

Take a drill and make two appropriate holes where you have made your two 15mm marks using a 5.5mm drill bit.

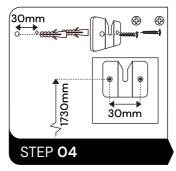

Once you have drilled your holes, push in your wall plugs then take the two screws supplied in the hanging pack, and guide them through the holes in the bracket. Then screw the bracket into the drilled holes.

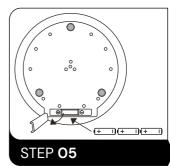

Remove the battery cover on the reverse of the Unicorn® Smartboard®. Then insert the three AA batteries supplied. ENSURE CORRECT POLARITY ALIGNMENT















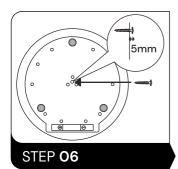

Take the final screw, and screw it into the back of the board. Leave approximately 5mm of the screw protruding from the board. You can now hang your Unicorn® Smartboard®.



Lift your Unicorn® Smartboard® and mount to the wall bracket on your wall. The screw in the board should slide down into the centre of the bracket. Check this is stable and adjust the Unicorn® Smartboard® screw if necessary.

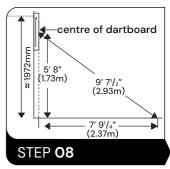

Use the Oche mate to mark the throw line. This should be 2.37m from the face of the dartboard. Alternatively measure 2.93m diagonally from the bullseye to the floor.



Download the Unicorn® ScoreBuddy® app, alternatively scan the OR code.





Open the Unicorn® ScoreBuddy® app.



Allow Permissions and ensure your device's Bluetooth® is switched on. Follow your devices manufacturer's instructions.















Press the connection button in the top right of the screen to get to the connection menu.




Activate the dartboard. Press the button on the front of the Unicorn® Smartboard®. A light will flash next to the button.



Ensure your status is enabled for all three connections as shown above.

If your dartboard does not connect automatically, press the smart button on the dartboard and then the reconnect button in the Unicorn® ScoreBuddy® app.

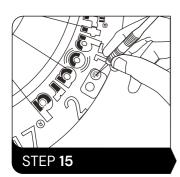

Magnetise ALL steel tip dart points. Insert each point in the magnetiser hole on the front of the Unicorn® Smartboard®. HOLD FOR 3 SECONDS



Add players!



Choose a game from the Unicorn® ScoreBuddy® menu and start playing!

After you have thrown your 3 darts, you can press the smart button on the dartboard to switch to your opponents turn, or follow the instructions on the app.

If your dart doesn't hit the board you can register the miss on the Unicorn® ScoreBuddy® app or tap the smart button on the dartboard for each missed dart.















How do I connect my Unicorn® Smartboard® to my device?

Press the smart button. If the board doesn't connect automatically, go to Unicorn® ScoreBuddy® app settings and press the reconnect button. You may need to press the smart button again to reactivate pairing.

What devices can I use with Unicorn® Smartboard®?

Unicorn® Smartboard® uses Bluetooth® LE to connect with your device. For further information please contact the device manufacturer. Only use Android or iOS devices.

Can I use any darts with my Unicorn® Smartboard®?

Yes, you can use any steel tip darts with the Unicorn® Smartboard®. We recommend tungsten and steel darts for the Unicorn® Smartboard®. Though brass and stainless steel darts do work, they have a higher registration fail ratio.

Can I rotate my Unicorn® Smartboard®?

Yes! Go to the Unicorn® ScoreBuddy® app connection menu and follow the instructions to rotate & recalibrate your Smartboard®. Unicorn® recommends rotating your dartboard frequently to evenly distribute wear.

My Unicorn® Smartboard® wobbles on the wall.

Not all wall surfaces are flat. We recommend Unicorn® dartboard wedges which can be found by searching 'dartboard wedges' at playwiththebest.com

DOs & DON'Ts

DO

Do keep your device within 1.5m of you Unicorn® Smartboard®.

Do ensure you use steel tip darts when using your Unicorn® Smartboard®.

Do keep your Unicorn® Smartboard® indoors within a low humidity environment.

Do fully close Scorebuddy® once game-play has finished. This is to conserve battery power.

DON'T

Don't over tighten the Unicorn® Smartboard® screw.

Don't ever drill into or try to disassemble your Unicorn® Smartboard®.

Don't use your Unicorn® Smartboard® near water or get it wet in anyway.

